

Pole Cap Installation Instructions

1. For Push Button Frames: Position pole cap on backside, top area of push button frame so the top surface of the pole cap is flush to the top surface of the Push Button Frame. Mark on Push Button Frame where two holes are on the pole cap. Drill and tap two 1/4-20 holes at marked positions.
2. For Navigator Push Button Stations: blind tap two 3/8" deep 1/4-20 holes. Caution: Be careful no debris from tapping enters the speaker and microphone grill areas.
3. Attach pole cap to Push Button Frame or Navigator with two 1/4-20 screws provided.

